PLEASE READ BEFORE PRINTING

Print page 2 and 3 of this document at 100% to ensure you are sizing yourself properly!

To double check your printing accuracy, compare the printed measure guides with a standard size ruler.

A. Measure width of nose:





Nasal Mask Measurement

- 1. Using the ruler above measure the width of your nose.
- 2. Using your nose measurement, find vour mask size in the chart below.

| Nose Size | *Advance | Advance Small | Elan [®] |
|--------------|----------|------------------|-------------------|
| Small | | | |
| Regular | | | |
| Large | | | |

* SleepWeaver Advance is one size fits most. If your nose measurement falls under 1.25" try SleepWeaver Advance Small first.

SleepWeaver **3D** Neck Sizing Guide

Not actual size Use cloth tape measure


| | LARGE |
|---------------------|-------------------------|
| REGULAR | |
| in 14 15 16 | 17 18 19 |
| 35 36 37 38 39 40 4 | 11 42 43 44 45 46 47 48 |

A. Measure width of nose:



Full Face Mask Measurements

- 1. Find measurement A. using top ruler.
- 2. Find measurement B. using side ruler.
- 3. Using both measurements, find your mask size in the chart below.

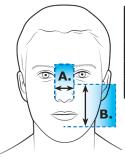

| Anew® Size | A. Measurement | B. Measurement |
|---------------|-------------------|-------------------|
| Small | 1" to 1.25" | 3.25" to 3.5" |
| Regular | 1.25" to 1.5" | 3.5" to 3.75" |
| Large | 1.5" & Up | 3.75" & Up |

B. Measure from bridge of nose to center of chin:

3.25" 3.5"

NOTE: If your measurement falls between sizes on ANY mask, choose the SMALLER mask size.

www.circadiance.com +1 888 825 9640 101606 REV3









Nasal Mask Measurement

- 1. Using the ruler above measure the width of your nose.
- 2. Using your nose measurement, find vour mask size in the chart below.

| Nose Size | *Advance | Advance Small | Elan [®] |
|--------------|----------|------------------|-------------------|
| Small | | | |
| Regular | | | |
| Large | | | |

* SleepWeaver Advance is one size fits most. If your nose measurement falls under 1.25" try SleepWeaver Advance Small first.

SleepWeaver **3D** Neck Sizing Guide

Not actual size Use cloth tape measure


| | LARGE |
|---------------------|------------------------|
| REGULAR | |
| in 14 15 16 | 17 18 19 |
| 35 36 37 38 39 40 4 | 1 42 43 44 45 46 47 48 |

A. Measure width of nose:



Full Face Mask Measurements

- 1. Find measurement A. using top ruler.
- 2. Find measurement B. using side ruler.
- 3. Using both measurements, find your mask size in the chart below.

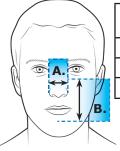

| Anew® Size | A. Measurement | B. Measurement |
|---------------|-------------------|-------------------|
| Small | 25 to 32mm | 83 to 89mm |
| Regular | 32 to 38mm | 89 to 95mm |
| Large | 38mm & Up | 95mm & Up |

B. Measure from bridge of nose to center of chin:

95mm

83mm •

89mm .

0mm

51mm

NOTE: If your measurement falls between sizes on ANY mask, choose the SMALLER mask size.

www.circadiance.com +1 888 825 9640

